

*(Sellers note: Please change the red color font to accurate brand or information)*

## Digital Clock Timer

### Quick user's manual

 


Congratulations on your purchase! Enjoy this light and portable digital clock timer which made for a customer's like you. Sturdy and durable components internal to external parts, responsive buttons with useful functions. Wider screen and large display for accurate time checking even without getting closer to the clock. It's the best device for cooking, exercise, sports practice, speed accuracy and more. Be a proud owner of this (Brand) Digital timer clock.

Thank you for choosing our brand!

**Included in the package;** 1 x Digital clock timer  
1 x Quick user's manual  
1 x AAA Battery

### Product Parts Illustration;

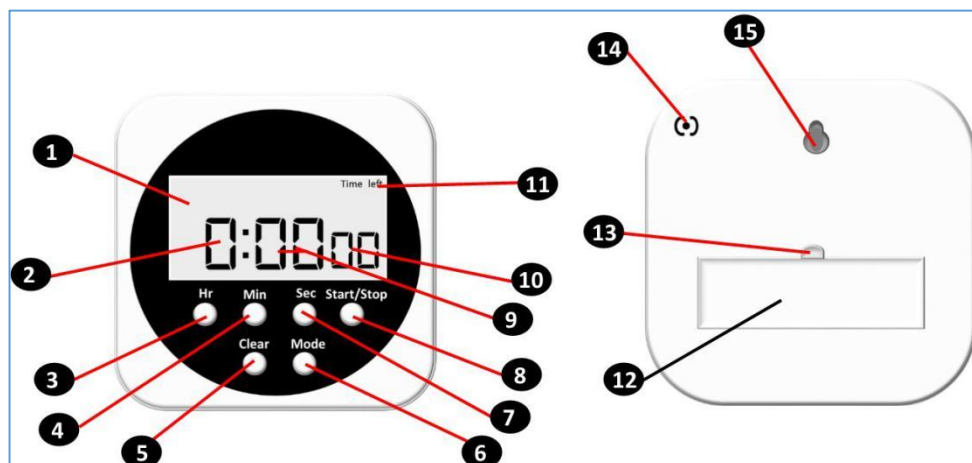

- 1- LCD Screen display
- 2- Digital time (Hr)
- 3- Hour function
- 4- Minutes function
- 5- Clear function
- 6- Mode function
- 7- Seconds function
- 8- Start/ stop function
- 9- Digital time ( Minutes)
- 10- Digital time (Seconds)
- 11- Status mode
- 12- Battery compartment
- 13- Battery cover lock
- 14- Alarm speaker
- 15- Hook hole

**Features:** Digital clock/ Timer/ Timing counter

Specifications:

**Quick reminders:**

- Please don't expose or place this device to direct sunshine or near hot area.
- Please keep it out from the reaching area of the children
- Keep it dry and away from any liquids or solvents
- Wipe the screen and surface with a soft and dry cloth
- Placed it in the area where you can easily touch the button once you need it.
- Use right battery, never customized the device
- Don't shake or toss this timer

**Operation**

Step 1- Please unboxed the unit from the packaging

Step 2- Remove the Battery Back cover by pulling the cover lock (#13)

Step 3- Insert the battery into the battery compartment (#12) just follow the battery sign position inside.

Step 4- Close the battery compartment

Step 5- You will see the screen will display 12:00 time (Now your unit is ready)

**Time clock setting**

Step 6- Press the (#3) hr button to set the correct hour "long press to make it quick"

Step 7- Press the (#4) Min. button to set the correct minutes "long press to make it

quick”

Step 8- Press the (#7) button to adjust the seconds “long press to make it quick” Now your time is ready for clock purposes.

### Setting up the timer

Step 1- Press the (#6) mode button to switch from clock to timer function

Step 2- The screen will display “**0:0000**”. Press the start/stop button (#8) the time will increase, and you can start and stop time by pressing it, then clear button (#5) to clear or reset the timer back to zero.

Step 3- If you want to set the time frame you need to repeat the steps stated in the time clock settings (Step 6 to 8) .

Step 4- Press the start/stop button (#8) the time will reduce back to **0:0000** then it will beep a loud alarm in 1 minute, indicating that the time has been finished. In case you no longer need the timer just press the start/stop (#8) button to stop it then clear button (#5) to clear or reset the timer back to zero.

Step 5- Just press the mode button to display the normal time clock.

Note: Removing the battery out from the unit will reset the time clock settings and you will need to set the accurate time again.

### Q/A

Problem	Cause	Solution
The unit can't be turned on/ No Display	Battery low or no battery/ battery positioned reversed	Please check if there's a new battery/ check the battery positioned accordingly
The display is not clear or fuzzy	Battery is weak	Please change the battery
The button is not working	The button edges are dirty	Please tap a little bit on the back and make sure there's no any dirt in it.
All suggestions are not working	Device is defective	Please contact the seller or customer service immediately (see Contact us)

Contact us:

Phone number: [xxxxxxx](tel:xxxxxxx)

Facebook page: [xxxx@facebook.com](https://www.facebook.com/xxxx)

Email us: [xxxxx@yahoo.com](mailto:xxxxx@yahoo.com)